



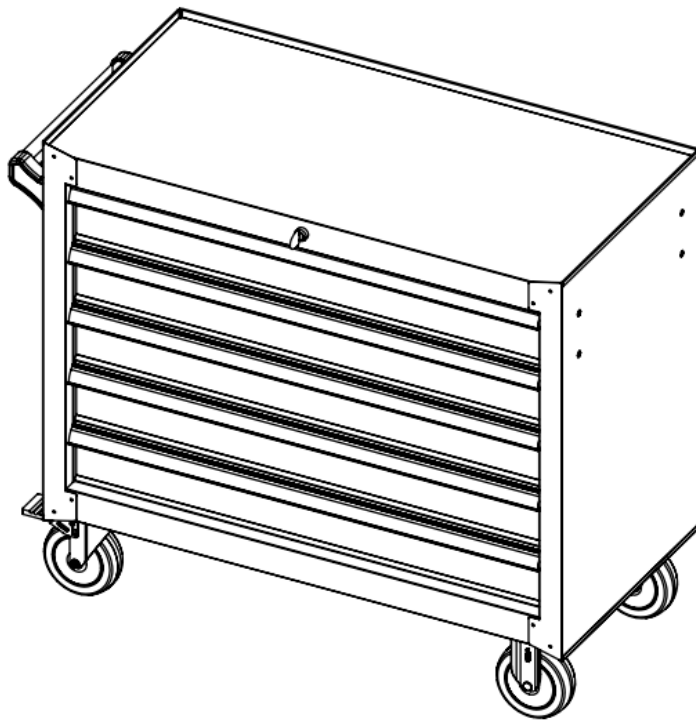


2.

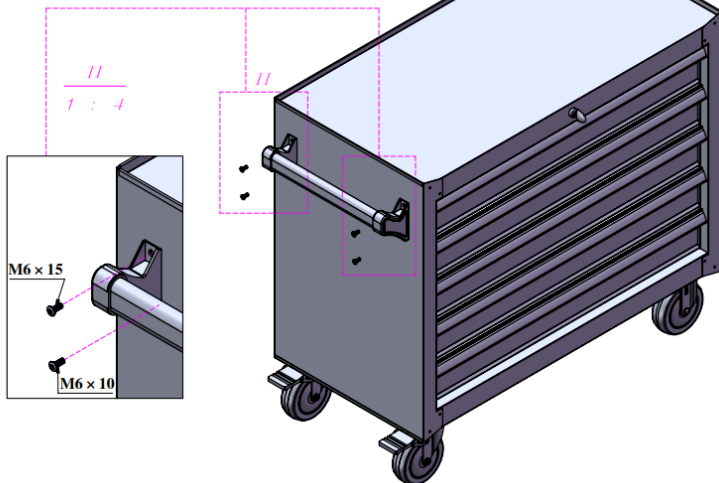

Install the handle on the upper part of the cabinet and fix it with screws

1. Close and lock the doors or drawers. Remove the key.
2. NOTE: The drawers must be pushed in completely to lock.
3. Remove the top mat from the cabinet.
4. Using two or more people, turn the cabinet upside down.
5. Fix the casters in a suitable position, making sure the bolts are seated in the casters, tighten the nuts.
6. Attach two swivel casters to the rear caster position.
7. Return the cabinet to its upright position.
8. Replace the top mat with the textured side facing up.
9. Unlock the doors or drawers.
10. Place the liner(s) in the tray or the drawers

1.

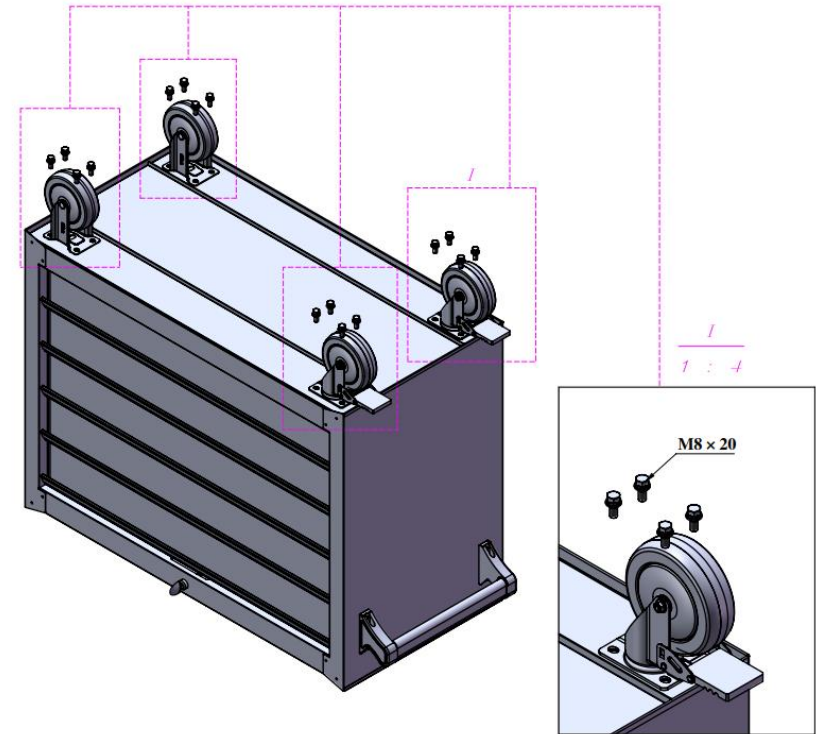

Scale **NTS**



5 DRAWER TOOL TROLLEY

PART ID **GK401**

Copyright Associated Projects P/L - All rights reserved.
This document is provided to the purchaser for guidance in
producing your finished product.

This is a one of depiction for Personal Use Only

Drawing # 1

Rev #

Date 22/02/2023

Sheet

1